


## Communication Interface Module Replacement

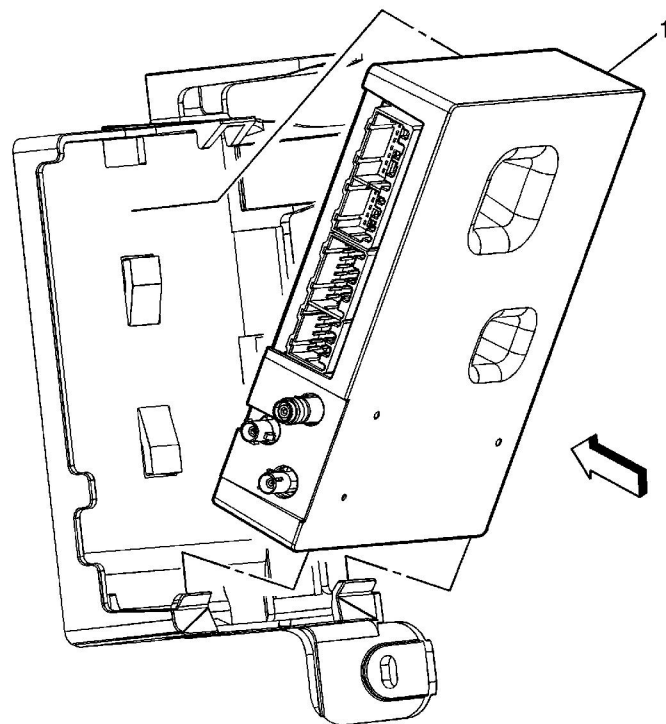

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>Remove the communication Interface Module Bracket. Refer to <a href="#">Communication Interface Module Bracket Replacement</a>.</p>	
<p>1</p>	<p>Communication Interface Module</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the electrical connections.</li> <li>2. Unsnap Module from integral tabs on Bracket.</li> <li>3. If replacing the communication interface module be sure to transfer Bluetooth antenna, if equipped.</li> <li>4. For programming and set up procedures, refer to <a href="#">Control Module References</a>.</li> </ol>