


Communication Interface Module Replacement

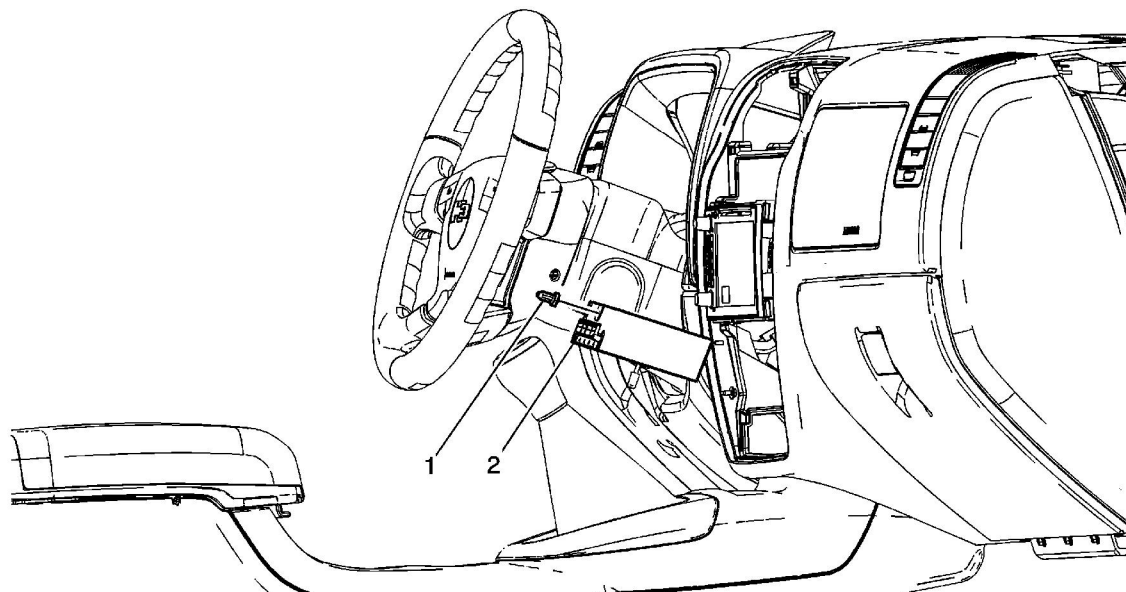

Callout	Component Name
<p><i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .</p>	
<p>Preliminary Procedure</p>	
<p>Remove the instrument panel center trim panel. Refer to Instrument Panel Center Trim Panel Replacement .</p>	
<p>1</p>	<p>Communication Interface Module Guide Pin</p> <p>Tip Turn counterclockwise to remove from the module in order to release the module from the bracket.</p>
<p>2</p>	<p>Communication Interface Module</p> <p>Tip</p> <ol style="list-style-type: none"> 1. Disconnect the electrical connectors. 2. Tip the module towards the opening in the instrument panel to remove. 3. Reprogram the communications interface module if replacing the unit. Refer to Control Module References .