


# Communication Interface Module Replacement

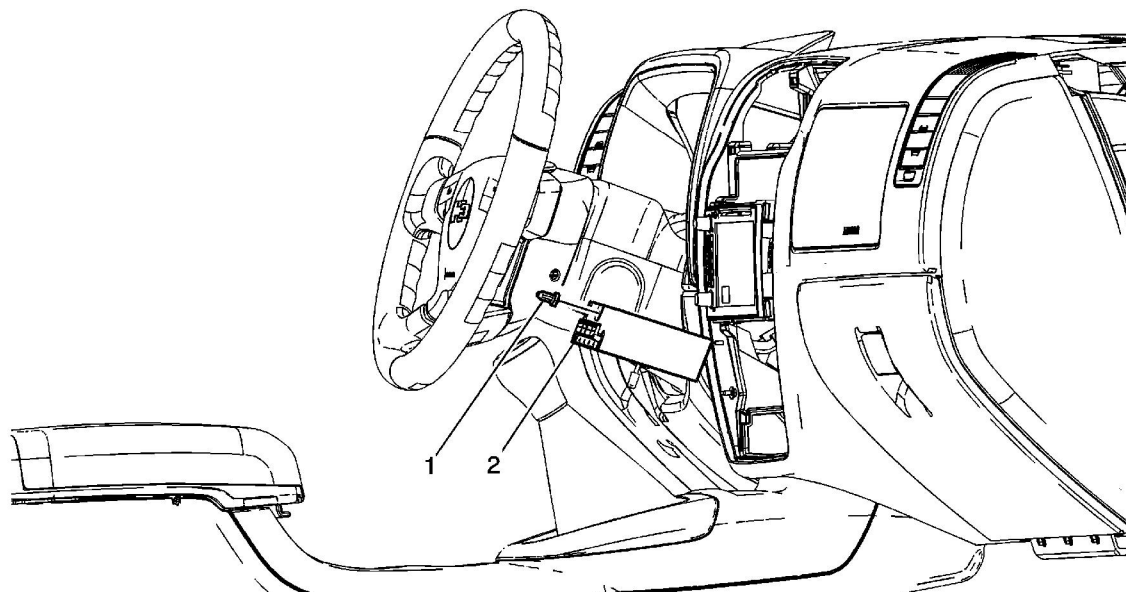

Callout	Component Name
<p><b>Preliminary Procedure</b></p>	
<p>Remove the instrument panel (I/P) center trim panel. Refer to <a href="#">Instrument Panel Center Trim Panel Replacement</a>.</p>	
<p>1</p>	<p>Communication Interface Module Guide Pin</p> <p><b>Tip</b> Turn counterclockwise to remove from the module in order to release the module from the bracket.</p>
<p>2</p>	<p>Communication Interface Module</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the electrical connectors.</li> <li>2. Tip the module towards the opening in the I/P to remove.</li> <li>3. Reprogram the communications interface module if replacing the unit. Refer to <a href="#">Control Module References</a>.</li> <li>4. When replacing the communication interface module be sure to transfer the bluetooth antenna, if equipped.</li> </ol>