


Communication Interface Module Replacement

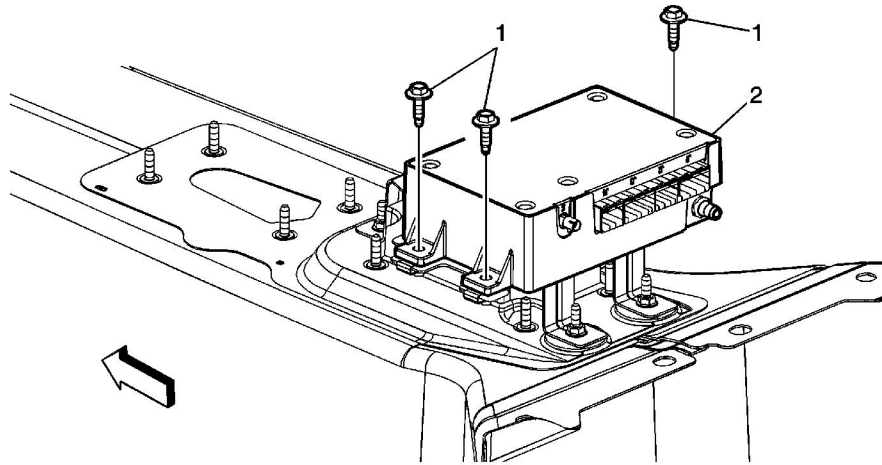

Callout	Component Name
<p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the rear window panel trim. Refer to Rear Window Panel Trim Replacement . 2. Program the communication interface module (OnStar®) after replacement. Refer to Control Module References . 	
1	<p>Communication Interface Module Bracket Bolt/Screw</p> <p>Notice: Refer to Fastener Notice in the Preface section.</p> <p>Tighten 10 N·m (89 lb in)</p>
2	<p>Communication Interface Module Assembly</p>

