


Communication Interface Module Replacement

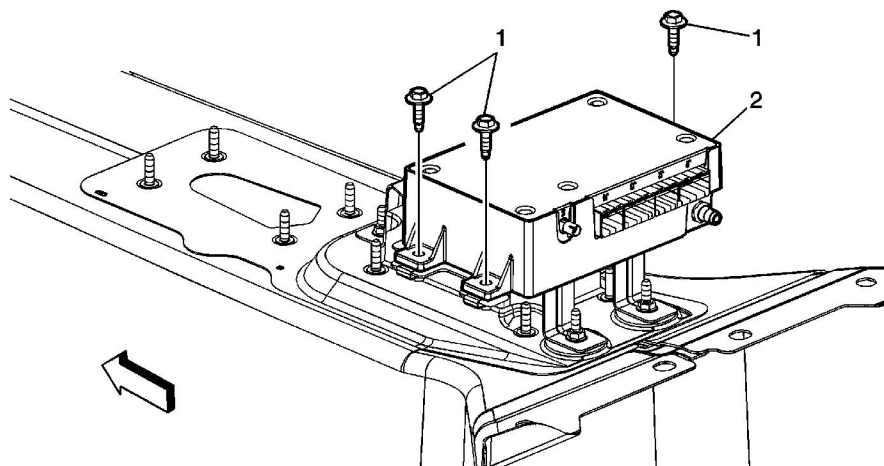

Callout	Component Name
Preliminary Procedures <ol style="list-style-type: none"> 1. Remove the rear window panel trim. Refer to Rear Window Panel Trim Replacement. 2. Program the communication interface module (OnStar®) after replacement. Refer to Control Module References. 3. When replacing the communication interface module be sure to transfer Bluetooth Antenna, if equipped. 	
<p style="text-align: center;">1</p>	<p>Communication Interface Module Bracket Bolt/Screw</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 10 N·m (89 lb in)</p>
<p style="text-align: center;">2</p>	<p>Communication Interface Module Assembly</p>